

# How to Update Files:




1. Connect the RS-232 (Null Cable) to the computer and receiver.
2. Plug the receiver to a power outlet
3. Then turn "ON" the receiver.


## 2 Download the correct upgrade tool & upgrade file



3

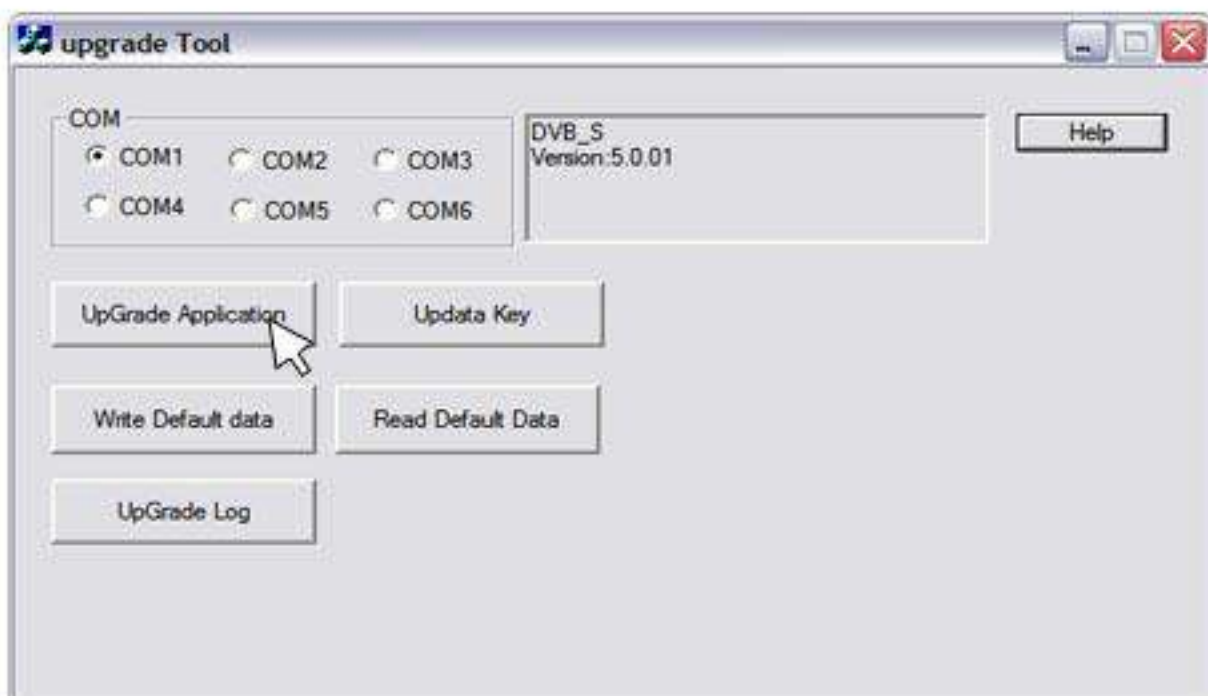

- Select COM1, COM2 or other one (Depend on the computer setup and connection ).
- Click on the "UpGrade Application"

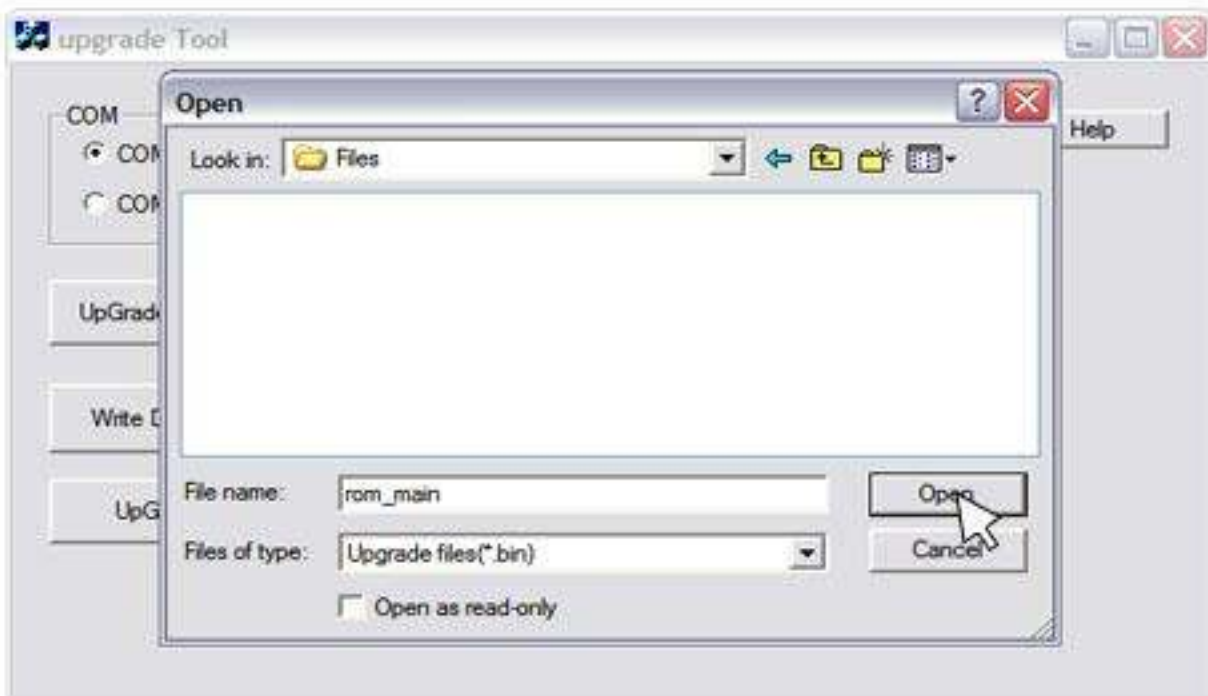

- Select the upgrade file, then press open
- The Satellite Receiver will automatic download the software from PC.
- When the receiver display "GOOD", means success update the software

**-If Further Support Is Needed Visit  
[www.opensource-FTA.com](http://www.opensource-FTA.com)**