

Sonicview Manual Key Entry

***Make sure you also turn off autoroll option

1. Go to Menu
2. Scroll to entertainment click on it
3. Enter in remote 7890 then “Code” will appear (Yellow Color)



4. Once you press the “Code” key settings will appear and use your remote to change the keys

